# 安装指导

Rosenberger

# *Installation Instruction*

*适用于 SLGK002 以及 SLGKT002 系列接地卡*
*Used for SLGK002 and SLGKT002 series Grounding Kits*

No. : MA_SLGK002
Revision: a00 05.03.2015

Step1. Cut the jacket of the cable, the length should be close to the grounding slice.
剪掉一段馈线外皮，露出外导体，长度大致与接地片相当。

Step2. Wrap moisture sealing tape on the grounding cable, to make the lug tail sealing well.
在接地线上缠绕防水胶泥，确保接线鼻子尾部防水密封良好。

Step3. Wrap the grounding slice to the cable.
把接地片包在馈线去皮处。

Step4. Tightening the grounding slice to the cable.
扎紧接地片，使之紧密贴合馈线外导体。

Step5. Wrap moisture sealing tape to the grounding slice.
接地片缠绕防水胶泥。

Step6. Wrap the vinyl electrical tape outside.
在防水胶泥外层再缠上胶带。

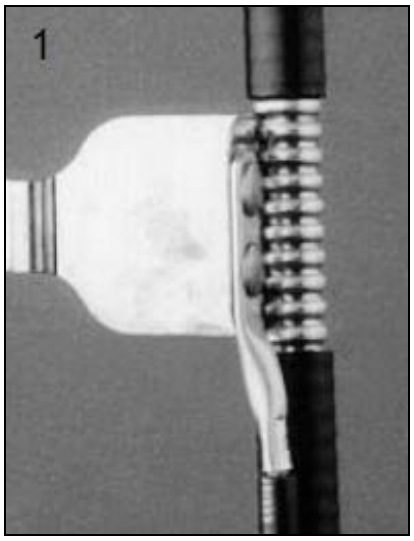


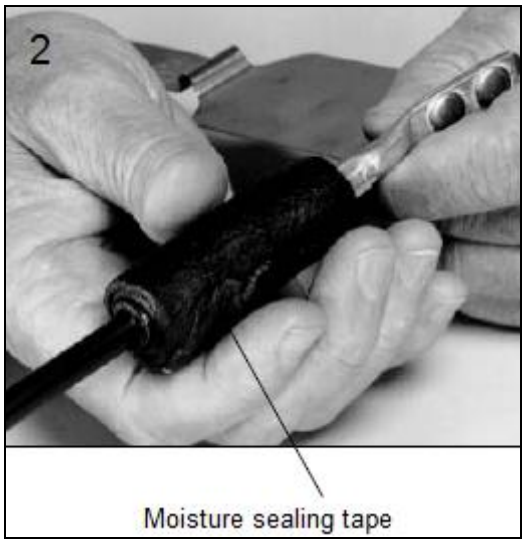


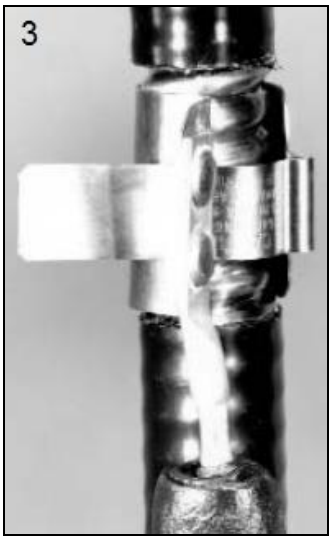


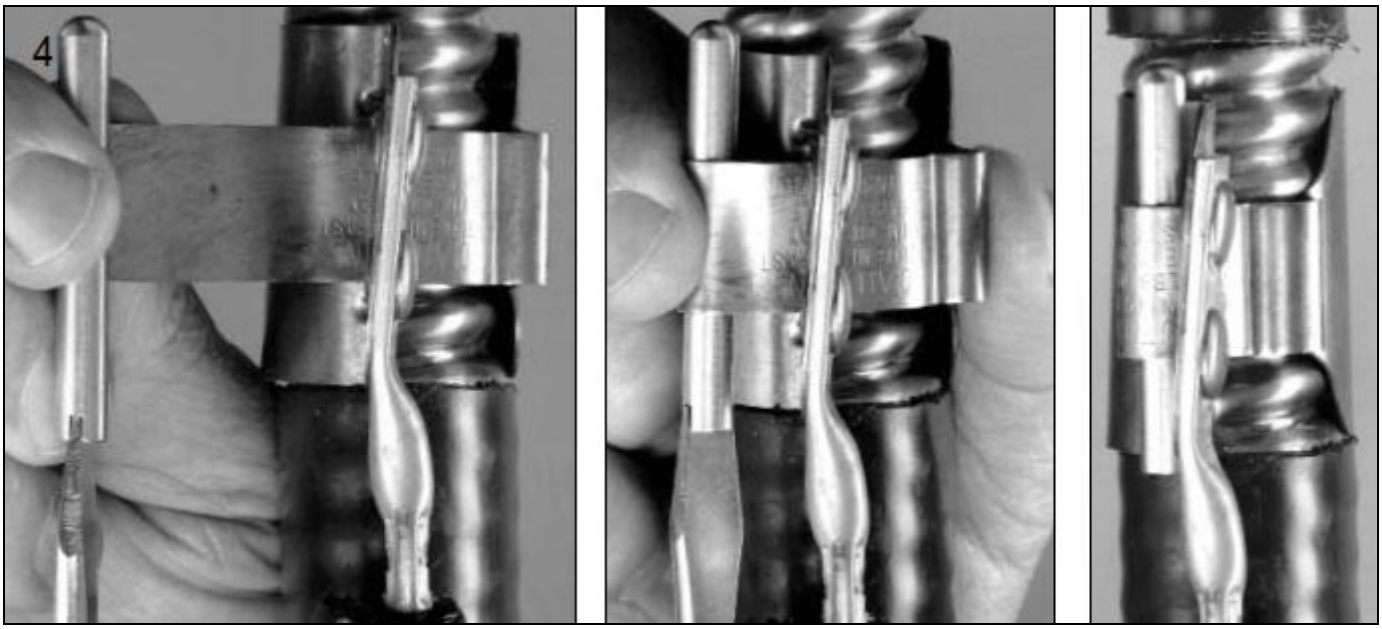

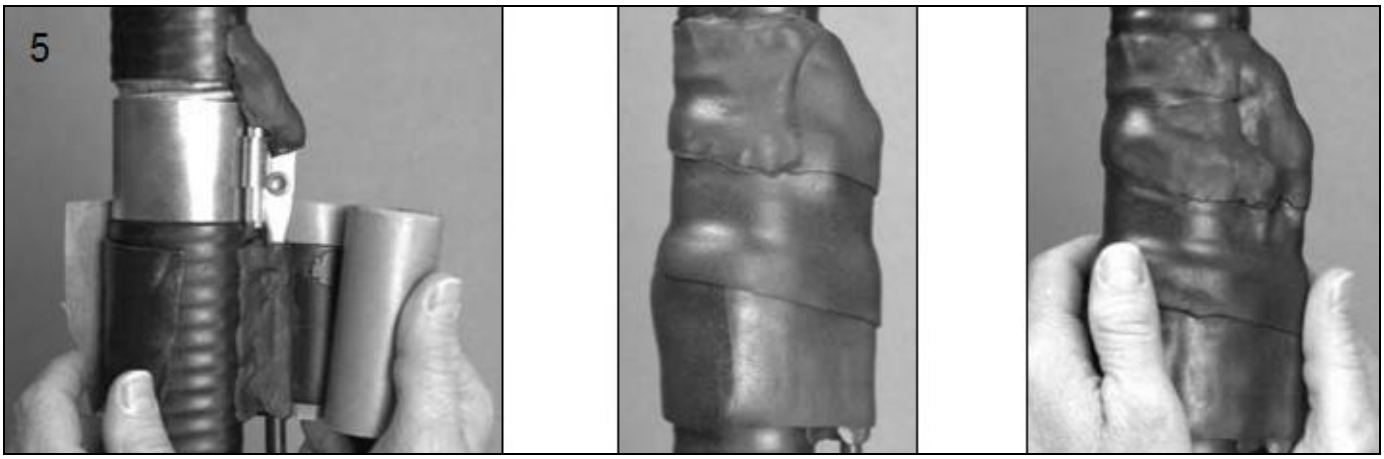


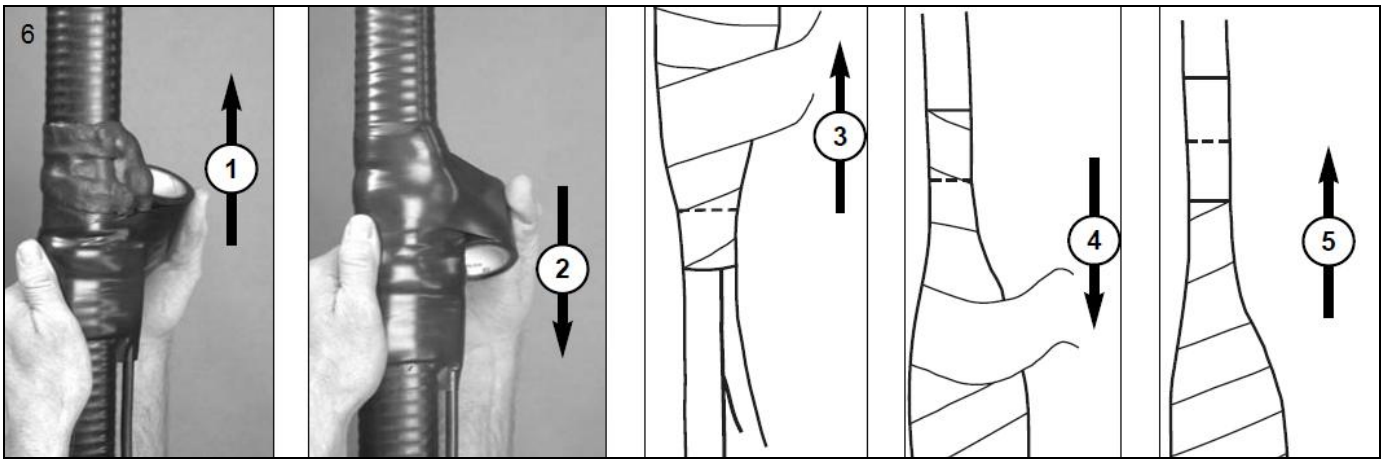


说明：1) 本说明中信息如有变动，恕不另行通知；

2) 罗森伯格公司申明对于不正确的使用或拆卸操作所导致的后果不负任何责任。

Note: 1) Information in this instruction is subject to change without notice;

2) Rosenberger disclaims any responsibility for the result of improper usage.

| Draft | Checker | Approved | Date | Rev. | Engineering change number | Name | Date |
|---|---|---|---|---|---|---|---|
| WG.Z | Sky | Lucy | 05/03/2015 | a00 | 15-s001 | WG.Z | 05/03/2015 |