



W SMP FEMALE CABLE CONNECTOR SUBASSEMBLY
 REF: W 1K101-270/90D3
 AND W 1K201-270/90D3

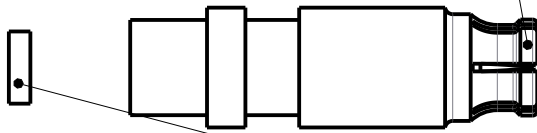

REF: W 1K101-270D3 AND W 1K201-270D3




W SMP MALE CABLE CONNECTOR SUBASSEMBLY
 REF: W 1S104-270/90D3
 AND W 1S141-270/90D3

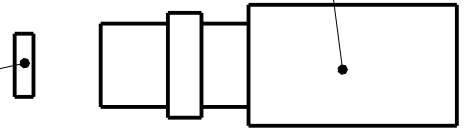


REF: W 1S104-270D3 AND W 1S141-270D3

CABLE STOP
 W 1K101-270/31

STEP 1: CABLE STRIP DIMENSIONS

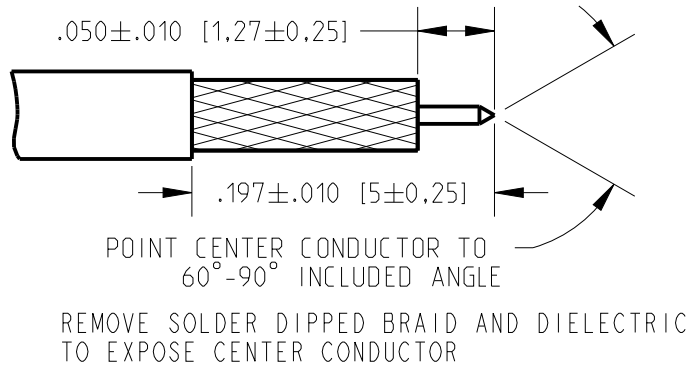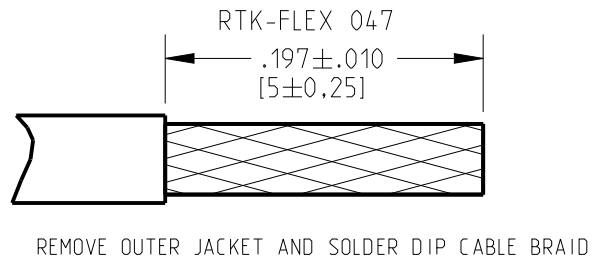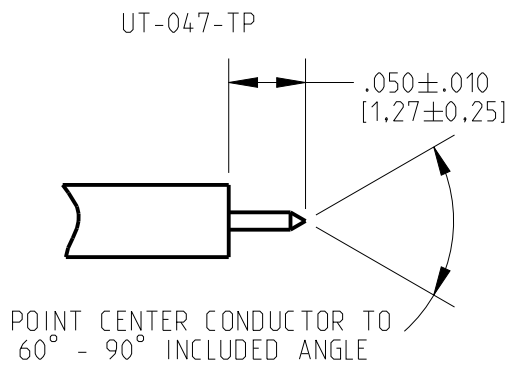

STEP 2: CABLE STOP ASSEMBLY

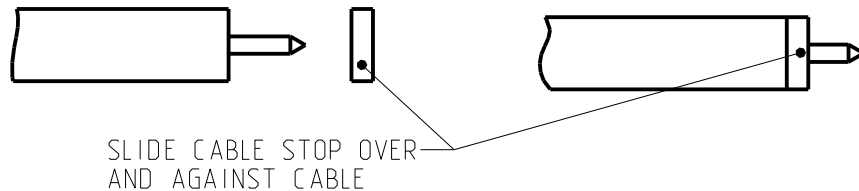

Rosenberger P.O. BOX 309
 Akron, PA 17501

TITLE
 W SMP CABLE CONNECTOR
 ASSEMBLY INSTRUCTION

DRAWN BY 08APR2019 APPROVED BY 08APR2019
 P. SILL J. HAVENER

SIZE A CAGE CODE 1BMF3 DRAWING NUMBER MA_W 1A1 REV a00

ASSEMBLY INSTRUCTIONS SHEET 1 OF 2

a00	RELEASED PER 19-s000	JGH	08APR2019
REV	DESCRIPTION OF CHANGE	APPD	DATE

THIS DRAWING AND ANY DATA CONTAINING HEREIN IS PROPERTY OF ROSENBERGER OF NORTH AMERICA, LLC AND IS PROPRIETARY AND CONFIDENTIAL. REPRODUCTION OR ISSUE TO THIRD PARTIES IN ANY FORM WHATSOEVER IS NOT PERMITTED WITHOUT WRITTEN AUTHORITY FROM ROSENBERGER OF NORTH AMERICA, LLC.

