
Technical Data Sheet

Rosenberger

Cable assembly RPC-1.00 Jack - RTK 047 - WSMP Jack

L70-336-XXX

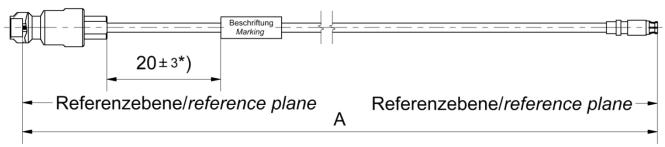

All dimensions are in mm; tolerances: ± 3mm for A ≤ 300 mm; ± 1% for A > 300 mm *) If length "A" \leq 90 mm marking is mount centric \pm 5mm

Available variants

Type	max. Insertion loss	Markin	ıg	Weight (g) / pce	
L70-336-XXX		ROSENBERGER L70-336-XXX	YYYY-WW sssss	$0.0056 \frac{g}{mm} * A[mm] + 2.2g$	

Maximum possible length = 6000mm XXX - length in mm = AWW - week YYYY - year sssss - serial no.

Note: Weight:

First constant = Cable weight per mm; Second Constant = Connector left and Connector right weight per pce

Assembly parts

Connector left RPC-1.00 Jack Connector right **WSMP Jack** Cable RTK 047-F Armour none

Electrical data

Impedance 50 Ω

Frequency DC to 100 GHz

Return loss¹ ≥ 15 dB, DC to 18 GHz ≥ 10 dB, 18 to 50 GHz 8 dB, 50 to 70 GHz ≥ 7 dB, 70 to 100 GHz

Insertion loss¹ see table available variants

Individual testing and documentation:

Measurement plot with all 4 S - Parameters (S11; S22; S21; S12) is included with the cable assembly and on the backside the care and handling instruction is printed.

Mechanical data

Minimum bend radius static 7.0 mm Minimum bend radius dynamic 14.0 mm

Environmental data

- 40 °C to +125 °C Temperature range

RoHS compliant

While the information has been carefully compiled to the best of our knowledge, nothing is intended as representation or warranty on our part and no statement herein shall be construed as recommendation to infringe existing patents. In the effort to improve our products, we reserve the right to make changes judged to be necessary.

For the installation of the electrotechnical equipment, particular electrotechnical expertise is required.



Draft	Date	Approved	Date	Rev.	Engineering change number	Name	Date
Marcel Panicke	12.07.18	Ronny Mark	10.01.23	b00	22-2195	Marion Striegler	10.01.23

Rosenberger Hochfrequenztechnik GmbH & Co. KG P.O.Box 1260 D-84526 Tittmoning Germany

Email: info@rosenberger.com

Tel. : +49 8684 18-0

Page 1/1

www.rosenberger.com

¹ Return Loss and Insertion Loss includes the measurement adaptor